

SPEEDFIT

Single Mandrel Field Attachable

RMSpumptools SPEEDFIT is the new benchmark for high-speed, consistently reliable field installations of downhole cable to wellhead and packer penetrators - saving you even more rig time. Requiring minimal parts and training, just a cable prep is required - SPEEDFIT requires no epoxy, no gel and no assembly of parts.

SPEEDFIT is easily adaptable for use with different size cables, resulting in simple redress for re-use with only a minimum of spares required. The Vertical Penetrator can be installed top or bottom fed into the Tubing Hanger, allowing simple retrofit to existing wellhead equipment designs.

**Less than 10 Minutes Assembly Time in the Field
after the Cable is Stripped**

Electrical Specification - (values may differ depending on model and materials)

Maximum Voltage:	5 kVAC
Maximum Working Current:	180 A
Maximum Working Temperature:	150°C (302°F)
Maximum Working Pressure:	5,000 psi
Maximum H ₂ S:	40%
Maximum CO ₂ :	90%

Key Performance Features

- Simple, Reliable, Efficient
- No Epoxy and No Gel
- Minimal Assembly of Parts
- Saves Significant Rig Time
- Full Range to fit all Cable Sizes
- ATEX/IECEX Certified
- Min ID Wellhead Profile: Ø2"
- Max OD Coupling Nut: Ø2.25"
- Plug and Play Style Assembly
- Dual Sealing - retains the exclusive Field Proven RMSpumptools Pressure Barrier
- Back-up O-Ring Seals between Field Attachable Connector and Penetrators.
- Fully testable after being installed on the Cable

Experience

The industry's unchallenged number one choice for reliability. Exclusive supplier to the demanding North Sea market for over 20 years.



SPEEDFIT

Single Mandrel Field Attachable Configurations

3 Part Wellhead Penetrator System



3 Part Packer Penetrator System



2 Part Packer Penetrator System



Splice



Termination




SPEEDFIT

Simple 3 Stage Installation

STAGE 1

Strip the cable and crimp the contacts.

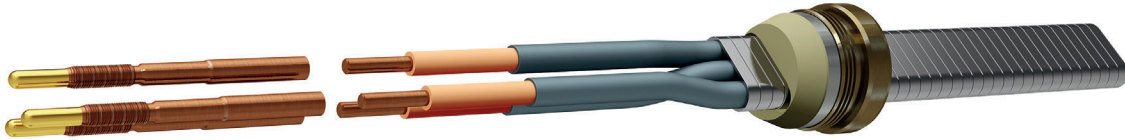

STAGE 2

Insert the cable into the housing and secure the nuts from the front.



STAGE 3

Tighten the threads on the body to energise the seals.



Various Redress Options available including:

- Boot Sizes
- Contact Sizes
- Cable Gland Sizes (to suit both flat and round cable options)

All that is needed for redress kits are two seals and new pins.